

5.3 Liste des codes de la télécommande

Marque TV	Code marque TV	Code modèle TV
Akai	0074	0037, 0178, 0208, 0556, 0702, 0020, 0753, 0812, 1675, 2232, 0699, 0138, 0086, 0064, 0293, 0102, 0107, 0207, 0328, 0658, 0330, 0060, 0122, 0790, 0112, 0647, 0124, 0730, 0386, 0664, 0660, 0693, 0347, 0349, 0346, 0663, 0361, 0357, 0758, 0787, 0788, 0760, 0359, 0365, 0404, 0367, 0697, 0392, 0406, 0794, 0798, 0801, 0800, 1118, 0395, 1326, 0439, 0417, 0437, 0548, 0480, 0405, 0421, 1308, 1865, 0055, 0290, 0292
Awa	0296	0108, 1681, 0138, 0328, 0658, 0330, 0170, 0647, 0787, 0788, 0344, 0388, 0347, 0796, 0792, 0794, 0395, 0417, 0399, 0405
Bang & Olufsen	0314	0565, 0090, 0056, 0340, 0691, 0428
Beko	0346	0037, 1652, 0020, 0741, 0138, 0511, 0412, 0346, 0795, 0359, 0367, 0696, 0800, 0486, 0437, 0450
Blue Sky	0395	0037, 0556, 0625, 0668, 0020, 1037, 1314, 1363, 1652, 0064, 0138, 0124, 0349, 0346, 0151, 0357, 0411, 0406, 0236, 0367, 0359, 0798, 0663, 0800, 0427, 1324, 1709, 0437, 1909, 0450, 1916
Blue Star	0396	0095, 0151, 0411, 0757
Bush	0445	0037, 0208, 0556, 0668, 0698, 0020, 1037, 1556, 1523, 1652, 1667, 2104, 0699, 0064, 0071, 0060, 0086, 0138, 0710, 0124, 0713, 0104, 0101, 0095, 0127, 0151, 0213, 0162, 0330, 0140, 0165, 0356, 0207, 0112, 0386, 0113, 0179, 0180, 0238, 0197, 0709, 0170, 0201, 0349, 0326, 0730, 0361, 0404, 0279, 0419, 0346, 0465, 0357, 0359, 0845, 0754, 0367, 0797, 0661, 0411, 0788, 0406, 0413, 0663, 0757, 0759, 0778, 0786, 0798, 0800, 0801, 0858, 0395, 1326, 0614, 2127, 0432, 0405, 0469, 1982, 1916, 1682, 1308, 2053, 2050, 1983
Carrefour	0492	0037, 0138, 0713, 0367, 0396, 0661
Daewoo	0692	0037, 0108, 0178, 0556, 0634, 0860, 1661, 2098, 0036, 0138, 0699, 0086, 0061, 0060, 0047, 0213, 0136, 0219, 0225, 0658, 0466, 0730, 0771, 0325, 0124, 0328, 0386, 0340, 0346, 0347, 0349, 0356, 0733, 0797, 0663, 0352, 0357, 0787, 0788, 0367, 0775, 0404, 0406, 0794, 0798, 1081, 0425, 1909, 0395, 0459, 0453, 0399, 0030, 0301
Dual-Tec	3528	0061, 0699, 0658, 0651, 0101, 0404, 0409
Firstline	1008	0037, 0208, 0556, 0668, 0020, 1037, 1363, 0061, 0699, 0086, 0099, 0138, 0060, 0293, 0328, 0330, 0127, 0165, 0658, 0346, 0356, 0347, 0730, 0386, 0179, 0352, 0666, 0364, 0357, 0845, 0359, 0667, 0797, 0787, 0788, 0365, 0367, 0404, 0711, 0794, 0419, 0413, 0798, 0800, 0802, 0426, 0844, 0395, 1909, 0450, 1308
Fujitsu	1052	0809, 0330, 0293, 0117, 0667, 0404, 0124, 0693, 0788, 0452, 0395
Galaxi	1068	0037, 0138, 0224, 0346, 0667, 0741
Goldline	1138	0138, 0346
GoldStar	1140	0037, 0178, 0020, 0138, 0061, 0699, 0086, 0099, 0160, 0658, 0741, 0060, 0071, 0730, 0101, 0666, 0701, 0328, 0330, 0112, 0113, 0742, 0332, 0386, 0346, 0787, 0788, 0754, 0347, 0352, 0357, 0789, 0359, 0364, 0794, 0404, 0802, 0798, 0367, 0800, 0395, 0400, 0437
Grundig	1162	0037, 0195, 0556, 0706, 1223, 1667, 2007, 0027, 0138, 0033, 0705, 0085, 0044, 0468, 0741, 0125, 0396, 0232, 0697, 0357, 0367, 0326, 0346, 0116, 0671, 0725, 0745, 0257, 0124, 0750, 0798, 0799, 0855, 1093, 0508, 2127, 1037, 0418, 0395, 1916, 1308, 0178, 0407, 0469, 2053, 0046, 0186, 0261, 0264, 0295, 0336, 0384
Hitachi	1251	1667, 0037, 0108, 0150, 0156, 0178, 0508, 0634, 1037, 1163, 1576, 1643, 2215, 2433, 0053, 0138, 0061, 0033, 0023, 0071, 0098, 0072, 0073, 0726, 0074, 0296, 0293, 0713, 0724, 0104, 0101, 0102, 0330, 0107, 0126, 0790, 0234, 0266, 0291, 0678, 0309, 0319, 0448, 0346, 0357, 0367, 0521, 0704, 0404, 0419, 0693, 0422, 0365, 0429, 0369, 0661, 0524, 0719, 0754, 0845, 0758, 0847, 0788, 0727, 0760, 0728, 0752, 0755, 0759, 0769, 0798, 0803, 0395, 0578, 0438, 0401, 0399, 0441, 1585, 2127, 0400, 0469, 0421, 0407, 0548, 0425, 0480, 0459, 0028, 0078, 0278, 0355, 0380
Imperial	1346	0037, 0138, 0033, 0089, 0086, 0044, 0099, 0072, 0741, 0224, 0730, 0725, 0666, 0101, 0346, 0845, 0795, 0357, 0750, 0837, 0692, 0419, 0755, 0798, 0397
Interactive	3534	0741, 0400
JVC	1464	1818, 0653, 1253, 0463, 0508, 0650, 0731, 1601, 0021, 0049, 0079, 0033, 0086, 0713, 0207, 0109, 0349, 0114, 0361, 0795, 0193, 0194, 0406, 0661, 0362, 0730, 0529, 0663, 0856, 0739, 0801, 1074, 1058, 0133, 0398, 0088, 0167, 0242, 0256, 0256
LG	1628	1423, 0178, 0037, 0108, 0556, 0698, 0020, 1681, 2182, 0741, 0061, 0699, 0138, 0086, 0267, 0099, 0071, 0471, 0092, 0101, 0112, 0113, 0492, 0328, 0330, 0220, 0060, 0730, 0386, 0276, 0332, 0701, 0666, 0643, 0347, 0742, 0160, 0346, 0357, 0787, 0788, 0404, 0754, 0359, 0789, 0794, 0798, 0800, 1036, 1083, 1030, 1084, 1139, 0957, 1027, 1075, 1078, 1174, 1721, 0395, 0399, 0400, 0437, 0029, 0035, 0039, 0045, 0135, 0176, 0273
Loewe	1660	0037, 0512, 0633, 1884, 0014, 0090, 0741, 0158, 0751, 0248, 0788, 0790, 0199, 0311, 0138, 0346, 0747, 0765, 0556, 0430, 0084, 0260
Marantz	1724	0037, 0556, 1454, 0086, 0138, 0112, 0730, 0170, 0792, 0344, 0798, 0346, 0367, 0357, 0417
Medion	1787	0037, 0512, 0556, 0668, 0698, 0020, 1037, 1556, 1667, 0119, 0699, 0138, 0207, 0692, 0113, 0346, 0352, 0357, 0798, 0359, 0800, 0367, 0450, 0459, 0453, 1916, 2001, 0469
Memorex	1800	0150, 0178, 0463, 1037, 0699, 0386, 0060, 0395
Mitsubishi	1855	0037, 0108, 0150, 0178, 0512, 0556, 0836, 1037, 1250, 0056, 0138, 0033, 0086, 0200, 0090, 0713, 0069, 0100, 0346, 0357, 0248, 0476, 0648, 0367, 0661, 0658, 0544, 0257, 0490, 0691, 0697, 0730, 0798, 0399, 0398
NEC	1950	0156, 0178, 0508, 0653, 1797, 0138, 0330, 0658, 0713, 0356, 0887, 0346, 0661, 0797, 0788, 0796, 0416, 1852, 0395, 1775, 0405, 0417, 0425, 0434
NEI	1952	0037, 1037, 0086, 0138, 0112, 0207, 0730, 0188, 0346, 0361, 0801, 0357, 0798, 0367
Neufunk	1970	0037, 0556, 0020, 0138, 0060, 0346, 0386, 0357, 0359, 0367, 0798, 0800, 0395, 0610
Nokia	2017	0208, 0239, 0072, 0681, 0664, 0356, 0080, 0102, 0797, 0845, 0107, 0847, 0718, 0758, 0760, 0755, 0419, 0429, 0421, 0480, 0548, 0610, 0400
Nordvision	3543	0112
Orbit	2103	0037, 0086, 0138, 0730, 0346, 0357, 0798
Orion	2111	0037, 0463, 0556, 0020, 1037, 2007, 0699, 0017, 0086, 0200, 0138, 0033, 0112, 0113, 0790, 0140, 0127, 0162, 0386, 0060, 0165, 0316, 0179, 0730, 0388, 0346, 0238, 0357, 0367, 0416, 0201, 0796, 0359, 0735, 0667, 0711, 0413, 0798, 0800, 2032, 2005, 1954, 0418, 0430, 0395, 0405, 0417, 1916, 0453, 2001, 0167, 0203, 0259
Online	2113	0037, 0138, 0349, 0346, 0357, 0406, 0798, 0367, 0663

Panasonic	2153	0650, 1650, 0037, 1153, 0108, 0208, 0226, 0508, 0896, 1271, 1457, 1480, 1636, 0026, 0333, 0072, 0129, 0119, 0091, 0107, 0118, 0223, 0790, 0137, 0146, 0204, 0284, 0312, 0346, 0451, 0493, 0138, 0734, 0755, 0760, 0798, 0459, 0889, 1140, 1001, 1310, 0402, 0399, 0556, 0452, 0548, 0007, 0008, 0040, 0393
Panavision	2154	0037, 0138, 0346, 0357, 0798, 0367, 0426
Philips	2195	0605, 1506, 1015, 0000, 0037, 0108, 1100, 0178, 1076, 0512, 0556, 0639, 0690, 1454, 1744, 1756, 1866, 1172, 0017, 0138, 0033, 0003, 0056, 0061, 0065, 0086, 0090, 0006, 0213, 1123, 0011, 0066, 0073, 0101, 0107, 0182, 0724, 0092, 0112, 0697, 0128, 0139, 0144, 0147, 0154, 0159, 0356, 0170, 0177, 0446, 0181, 0183, 0683, 0205, 0275, 0390, 0344, 0346, 0357, 0367, 0645, 0684, 0648, 0651, 0685, 0691, 0725, 0730, 0744, 0760, 0784, 0792, 0797, 0798, 0857, 0863, 1165, 1133, 1148, 1187, 1185, 0919, 1124, 1038, 1177, 1188, 0967, 1129, 1109, 1110, 1023, 0940, 0902, 1183, 0991, 1149, 1128, 1125, 1179, 0399, 0407, 0395, 1115, 1169, 0002, 0015, 0025, 0058, 0062, 0063, 0087, 0121, 0123, 0130, 0131, 0145, 0270, 0324, 0389, 0391
Pioneer	2212	0037, 0512, 0698, 1260, 1457, 1636, 0138, 0504, 0086, 0072, 0741, 0104, 0458, 0153, 0112, 0344, 0346, 0730, 0357, 0367, 0755, 0759, 0792, 0798, 1048, 1086, 0464, 0679, 0400, 0407, 0486
Proline	2274	0037, 0625, 0634, 1037, 0138, 0346, 0357, 0390, 0693, 0730, 0293, 0365, 0179, 0798, 1613
Protech	2284	0037, 0668, 1037, 0692, 0138, 0060, 0086, 0099, 0699, 0061, 0703, 0224, 0730, 0188, 0101, 0112, 0330, 0346, 0795, 0788, 0357, 0367, 0798, 0000, 0395, 0405, 0486
ProVision	2291	0037, 0556, 0020, 0138, 0112, 0113, 0346, 0352, 0798, 0357, 0800, 0359, 0425, 1324, 1531
Radiola	2330	0037, 0556, 0086, 0138, 0065, 0330, 0730, 0112, 0788, 0346, 0390, 0357, 0367, 0798
Roadstar	2398	0037, 0668, 0020, 1037, 0692, 0138, 0699, 0060, 0064, 0140, 0124, 0346, 0349, 0658, 0386, 0323, 0224, 0795, 0357, 0367, 0406, 0663, 0798, 0395, 0437, 0405, 1916, 1326
Samsung	2448	1173, 1115, 1150, 0037, 0156, 0178, 0208, 0226, 0556, 0618, 0650, 0702, 0812, 0821, 0348, 0138, 0060, 0016, 0692, 0018, 0293, 0086, 0699, 0061, 0019, 0160, 0200, 0741, 0251, 0093, 0112, 0455, 0356, 0327, 0157, 0169, 0170, 0314, 0378, 0280, 0328, 0330, 0288, 0658, 0332, 0730, 0386, 0346, 0347, 0647, 0364, 0357, 0693, 0365, 0367, 0404, 0000, 0783, 0787, 0788, 0789, 0794, 0798, 0799, 0802, 1101, 0395, 0398, 0405, 0402, 0022, 0048, 0120
Sansui	2458	0037, 0171, 0463, 0706, 0020, 0753, 1236, 1556, 0086, 0138, 0207, 0730, 0346, 0357, 0798, 0367, 0430, 0439, 0456, 1531, 0405
Sanyo	2462	1117, 1116, 0108, 0156, 0208, 0508, 1037, 1142, 1276, 1507, 1667, 0138, 0741, 0061, 0122, 0751, 0200, 0293, 0713, 0101, 0328, 0330, 0076, 0103, 0096, 0648, 0080, 0658, 0086, 0060, 0190, 0191, 0347, 0704, 0364, 0346, 0388, 0282, 0647, 0693, 0365, 0369, 0404, 0661, 0680, 0707, 0716, 0718, 0725, 0723, 0777, 0787, 0788, 0796, 0794, 0802, 0803, 1208, 0417, 0395, 0399, 0486, 0405, 0469, 1585, 0078
Schneider	2501	0037, 0556, 0668, 0020, 1037, 0061, 0138, 0086, 0033, 0064, 0101, 0104, 0330, 0066, 0081, 0112, 0124, 0172, 0170, 0207, 0198, 0346, 0349, 0658, 0215, 0352, 0357, 0404, 0730, 0666, 0361, 0272, 0419, 0845, 0788, 0390, 0483, 0671, 0406, 0367, 0359, 0409, 0663, 0759, 0798, 0801, 0800, 0459, 0407, 1909, 1982, 1916, 1324
Sharp	2550	1193, 1393, 0650, 0653, 0818, 0012, 0041, 0043, 0033, 0184, 0790, 0713, 0277, 1041, 0774, 0661, 0413, 0645, 0677, 0716, 1004, 1169, 1171, 1056, 0945, 1028, 0398, 0395, 0461, 0417, 0009, 0148, 0161, 0163, 0206, 0318
Siera	2576	0037, 0556, 0086, 0138, 0730, 0390, 0346
Sony	2679	1651, 1505, 0000, 0650, 1087, 0927, 0810, 1825, 0010, 0013, 0699, 0033, 0713, 0200, 0244, 0313, 0142, 0209, 0357, 0388, 0661, 0667, 0485, 0673, 0675, 0693, 0716, 0796, 0798, 0859, 0921, 1050, 0987, 0653, 0397, 0037, 0556, 0398, 0001, 0004, 0051, 0189, 0196, 0240, 0243, 0249, 0310
Sound & Vision	2680	0064, 0663, 0703, 0356, 0797, 0349, 0124, 0667, 0406
Soundwave	2689	0037, 1037, 0086, 0138, 0112, 0730, 0224, 0346, 0357, 0416, 0798, 0367, 0795, 0437
Standard	2713	0037, 1037, 0061, 0699, 0060, 0086, 0138, 0064, 0124, 0658, 0330, 0730, 0386, 0346, 0356, 0349, 0663, 0357, 0367, 0797, 0404, 0788, 0000, 0416, 0406, 0798, 0395
Starlite	2728	0037, 0658, 0112, 0060, 0386, 0346, 0138, 0357, 0798, 0395, 0405, 0417
SuperTech	2789	0037, 0556, 0328, 0138, 0658, 0347, 0060, 0349, 0346, 0386, 0352, 0787, 0364, 0357, 0802, 0663, 0794, 0367, 0798, 0395
Tandy	2843	0061, 0012, 0064, 0072, 0330, 0657, 0293, 0102, 0666, 0124, 0693, 0663, 0349, 0365, 0404, 0788, 0406, 0758, 0000, 0755, 0398
Tec	2861	0037, 0061, 0699, 0099, 0658, 0187, 0060, 0666, 0101, 0386, 0330, 0102, 0188, 0357, 0788, 0758, 0846, 0000, 0404, 0798, 0395
Telefunken	2914	0037, 0560, 0625, 0698, 0702, 0712, 0020, 0753, 0820, 0821, 0896, 1556, 1681, 0086, 0414, 0138, 0104, 0033, 0346, 0187, 0308, 0357, 0367, 0602, 0721, 0153, 0730, 0729, 0732, 0737, 0738, 0759, 0798, 0846, 1054, 0397, 0400, 0407, 0444, 0445, 0891, 1536, 0706, 0556, 0486, 0028, 0078
Telesonic	2930	0037, 0138, 0346, 0357, 0798, 0367
Teletech	2934	0037, 0668, 1037, 0699, 0138, 0099, 0060, 0092, 0112, 0386, 0666, 0346, 0357, 0367, 0188, 0798, 0395
Thomson	2972	0037, 0560, 0625, 0753, 1447, 0414, 0024, 0061, 0138, 0086, 0726, 0031, 0104, 0185, 0229, 0297, 0153, 0187, 0164, 0363, 0305, 0346, 0357, 0367, 0495, 0467, 0671, 0727, 0729, 0730, 0732, 0733, 0748, 0749, 0759, 0798, 0846, 0400, 0407, 0556, 0343, 0387
Tokai	3001	0037, 0668, 1037, 0086, 0138, 0658, 0330, 0356, 0730, 0346, 0188, 0693, 0357, 0797, 0788, 0367, 0404, 0293, 0798, 0395
Tokyo	3004	0061, 0328, 0660, 0787, 0347, 0794, 0392
Toshiba	3021	1031, 0508, 0156, 0195, 0618, 0650, 0821, 1037, 1524, 0020, 0705, 0202, 0085, 0660, 0713, 0140, 0258, 0110, 0238, 0228, 0330, 0132, 0396, 0152, 0348, 0359, 0317, 0315, 0661, 0369, 0667, 0392, 0499, 0613, 0468, 0624, 0626, 0637, 0676, 0682, 0688, 0761, 0788, 0800, 0803, 1168, 1145, 1040, 1020, 0942, 0398, 0395, 0405, 0417, 0400, 1457, 1916, 0698, 0037, 1556, 0005, 0067, 0078, 0211
Transtec	3042	0328, 0787
Trident	3054	0330, 0000, 0788, 0790, 0404
Tristar	3057	0349, 0663, 0406, 0405
Triumph	3058	0037, 0556, 0790, 0106, 0346, 0138, 0132
United	3106	0037, 0556, 0020, 1037, 1652, 0138, 0092, 0112, 0798, 0357, 0800, 0359, 0367, 1983, 0437, 1916, 1982, 1770
Univox	3116	0037, 0138, 0346, 0357, 0844, 0367, 0798, 0188
Vision	3198	0037, 0086, 0730, 0138, 0330, 0788, 0346, 0798, 0416, 0357, 0405
Windstar	3266	0411, 0151
Yoko	3336	0037, 0138, 0692, 0741, 0061, 0086, 0699, 0658, 0060, 0064, 0730, 0112, 0328, 0330, 0663, 0124, 0386, 0346, 0349, 0787, 0788, 0347, 0000, 0404, 0367, 0794, 0406, 0405, 0395
Zanussi	3349	0071, 0330, 0754, 0788, 0117, 0404